



- 26. 하늘막 (CYCLORAMA)
- 25. 장치봉 9 (#9 SET BATTEN)
- 24. 끝막 3 (#3 DRAW CURTAIN)
- 23. 하늘막상단조명 + 머리막 (SKY CYC. LIGHT + HOUSE BORDER)
- 22. 장치봉 8 (#8 SET BATTEN)
- 21. 후면음향반사판 (ACOUSTICAL SHELL-BACK WALL)
- 20. 장치봉 7/ 보더 2 (#7 SET BATTEN/ #2 BOR)
- 19. 장치봉 6 (#6 SET BATTEN)
- 18. 조명봉 3 (#3 LIGHT BATTEN)
- 16, 17. 측면음향반사판 2, 4 (#2, 4 ACOUSTICAL SHELL-SIDE WALL)
- 15. 천장음향반사판 2 (#2 ACOUSTICAL SHELL-CEILING)
- 14. 끝막 2 (#2 DRAW CURTAIN)
- 13. 영상막 (SCREEN)
- 12. 장치봉 5 (#5 SET BATTEN)
- 11. 조명봉 2 (#2 LIGHT BATTEN)
- 10. 장치봉 4 (#4 SET BATTEN)
- 09. 장치봉 3 (#3 SET BATTEN)
- 07, 08. 측면음향반사판 1, 3 (#1, 3 ACOUSTICAL SHELL-SIDE WALL)
- 06. 천장음향반사판 1 (#1 ACOUSTICAL SHELL-CEILING)
- 05. 장치봉 2/ 보더 1 (#2 SET BATTEN/ #1 BOR)
- 04. 끝막 1 (#1 DRAW CURTAIN)
- 03. 조명봉 1 (#1 LIGHT BATTEN)
- 02. 장치봉 1 (#1 SET BATTEN)
- 01. 면막 (HOUSE CURTAIN)
- 00. 영점선 (ZERO LINE)
- 01. 앞무대조명 (APRON LIGHT)
- 02. 현수막봉 (PLACARD BATTEN)